

1204/1204FX

XENYX

User's Manual



Version 1.0 January 2006



www.behringer.com



XENYX 1204/1204FX

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside; refer servicing to qualified personnel.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure—voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

DETAILED SAFETY INSTRUCTIONS:

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) CAUTION - These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions unless you are qualified to do so.

TABLE OF CONTENTS

1. INTRODUCTION	4
1.1 General mixing console functions	5
1.2 The user's manual	5
1.3 Before you get started	5
1.3.1 Shipment	5
1.3.2 Initial operation	5
1.3.3 Online registration	5
2. CONTROL ELEMENTS AND CONNECTORS	5
2.1 Mono channels	5
2.1.1 Microphone and line inputs	5
2.1.2 Equalizer	6
2.1.3 Aux sends	6
2.1.4 Routing switch, solo and channel fader	6
2.2 Stereo channels	7
2.2.1 Channel inputs	7
2.2.2 Equalizer stereo channels	7
2.2.3 Aux sends stereo channels	7
2.2.4 Routing switch, solo and channel fader	7
2.3 Connector panel and main section	7
2.3.1 Aux sends 1 and 2	7
2.3.2 Aux send connectors 1 and 2	7
2.3.3 Stereo aux return connectors	7
2.3.4 Stereo aux return	8
2.3.5 Tape input / tape output	8
2.3.6 Level meter and monitoring	8
2.3.7 Alt 3-4 and main mix fader	9
2.4 Rear view of 1204FX/1204	9
2.4.1 Main mix outputs, Alt 3-4 outputs and control room outputs	9
2.4.2 Voltage supply, phantom power and fuse	10
3. DIGITAL EFFECTS PROCESSOR	10
4. INSTALLATION	11
4.1 Rack mounting	11
4.2 Cable connections	11
4.2.1 Audio connections	11
5. SPECIFICATIONS	12
6. WARRANTY	13

XENYX 1204/1204FX

FOREWORD



Dear Customer,

I'm sure you're one of those people who have devoted themselves body and soul to your chosen area and no doubt this has made you an expert in your field.

Well, for over 30 years, my passion has been music and electronics. This not only led me to establish BEHRINGER, but also enabled me to share my enthusiasm with our employees. During all the years I've been involved with studio technology and end users, I have

developed a feel for the things that really count, such as sound quality, reliability and ease of use. What is more, I have always had the desire to test the boundaries of what is technically feasible.

It was precisely this motivation that prompted me to start work on a new series of mixing consoles. Since our XENYXs had already set new standards world-wide, I knew the development objectives behind the next generation of mixing consoles had to be especially ambitious.

Thus, the concept and design of the new XENYX mixing consoles bear my signature. The design work, the entire circuit diagram and PCB development, and even the mechanical concepts are my own work. I carefully selected each individual component – with the aim of pushing the mixing consoles' combining analog and digital technologies to their limits.

My vision was to enable you, the user, to give free rein to your true potential and creativity. The result is mixing consoles that combine incredible performance with intuitive operability. They cannot fail to impress with their extremely flexible routing possibilities plus a fantastic wealth of functions. Innovative technologies, such as the completely new XENYX Mic Preamps and the "British" EQs, guarantee optimum sound quality. And extraordinarily high-quality components provide unrivalled reliability, even under extreme loads.

Thanks to the quality and ease of use of your new XENYX mixing console you'll soon come to appreciate that I, both personally and in my capacity as musician and sound engineer, put you, the end user, first and that these products were only possible because of the passion and the attention to detail that went into them.

Thank you for the confidence you have placed in us by purchasing the XENYX mixing console. I should also like to thank all those who, with their personal commitment and passion, have helped me create this impressive series of mixing consoles.

Kindest regards,

Uli Behringer

1. INTRODUCTION

Congratulations! In purchasing the BEHRINGER XENYX you have acquired a mixer whose small size belies its incredible versatility and audio performance.

The XENYX Series represents a milestone in the development of mixing console technology. With the new XENYX microphone preamps including phantom power as an option, balanced line inputs and a powerful effects section, the mixing consoles in the XENYX Series are optimally equipped for live and studio applications. Owing to state-of-the-art circuitry your XENYX console produces a warm analog sound that is unrivalled. With the addition of the latest digital technology these best-in-class consoles combine the advantages of both analog and digital technology.

The microphone channels feature high-end XENYX Mic Preamps that compare well with costly outboard preamps in terms of sound quality and dynamics and boast the following features:

- ▲ 130 dB dynamic range for an incredible amount of headroom
- ▲ A bandwidth ranging from below 10 Hz to over 200 kHz for crystal-clear reproduction of even the finest nuances
- ▲ The extremely low-noise and distortion-free circuitry guarantees absolutely natural and transparent signal reproduction
- ▲ They are perfectly matched to every conceivable microphone with up to 60 dB gain and +48 volt phantom power supply
- ▲ They enable you to use the greatly extended dynamic range of your 24-bit/192 kHz HD recorder to the full, thereby maintaining optimal audio quality

"British EQ"

The equalizers used for the XENYX Series are based on the legendary circuitry of top-notch consoles made in Britain, which are renowned throughout the world for their incredibly warm and musical sound character. Even with extreme gain settings these equalizers ensure outstanding audio properties.

Multi-effects processor

Additionally, your XENYX mixing console has an effects processor with 24-bit A/D and D/A converters included, which gives you 100 presets producing first-class reverb, delay and modulation effects plus numerous multi-effects in excellent audio quality.

The XENYX mixing consoles are equipped with a state-of-the-art switched-mode power supply (SMPS). Unlike conventional circuitry an SMPS provides an optimum supply current regardless of the input voltage. And thanks to its considerably higher efficiency a switched-mode power supply uses less energy than conventional power supplies.

USB/Audio interface

The USB interface supplied with the unit is a perfect match for the XENYX Series and serves as a powerful recording interface to your PC or MAC®. It supports the digital transmission of signals on up to four channels with max. 48 kHz and extremely low latency. When wired to the CD/TAPE INPUT and OUTPUT connectors, the interface transfers the stereo mix from the console directly to a computer. Both the recording signal and the playback signal from the computer can be monitored at the same time. In this way, you can use several recording runs to produce complete multi-track recordings.

CAUTION!

👉 We should like to draw your attention to the fact that extreme volumes may damage your hearing and/or your headphones or loudspeakers. Turn the MAIN MIX faders and phones control in the main section fully down before you switch on the unit. Always be careful to set the appropriate volume.

1.1 General mixing console functions


A mixing console fulfils three main functions:

- ▲ **Signal processing:** Preamplification, level adjustment, mixing of effects, frequency equalization.
- ▲ **Signal distribution:** Summing of signals to the aux sends for effects processing and monitor mix, distribution to one or several recording tracks, power amp(s), control room and 2-track outputs.
- ▲ **Mix:** Setting the volume level, frequency distribution and positioning of the individual signals in the stereo field, level control of the total mix to match the recording devices/crossover/power amplifier(s). All other mixer functions can be included in this main function.

The interface of BEHRINGER mixing consoles is optimized for these tasks enabling you to easily keep track of the signal path.

1.2 The user's manual

The user's manual is designed to give you both an overview of the controls, as well as detailed information on how to use them. In order to help you understand the links between the controls, we have arranged them in groups according to their function. If you need to know more about specific issues, please visit our website at <http://www.behringer.com>, where you'll find explanations of e.g. effects and dynamics applications.


 **The block diagram supplied with the mixing console gives you an overview of the connections between the inputs and outputs, as well as the associated switches and controls.**

For the moment, just try and trace the signal path from the microphone input to the aux send 1 connector. Don't be put off by the huge range of possibilities; it's easier than you think! If you look at the overview of the controls at the same time, you'll be able to quickly familiarize yourself with your mixing console and you'll soon be making the most of all its many possibilities.

1.3 Before you get started


1.3.1 Shipment


Your mixing console was carefully packed in the factory to guarantee safe transport. Nevertheless, we recommend that you carefully examine the packaging and its contents for any signs of physical damage, which may have occurred during transit.

 **If the unit is damaged, please do NOT return it to us, but notify your dealer and the shipping company immediately, otherwise claims for damage or replacement may not be granted.**

1.3.2 Initial operation

Be sure that there is enough space around the unit for cooling purposes and to avoid over-heating please do not place your mixing console on high-temperature devices such as radiators or power amps. The console is connected to the mains via the supplied cable. The console meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating.

 **Please note that all units must be properly grounded. For your own safety, you should never remove any ground connectors from electrical devices or power cables, or render them inoperative.**

 **Please ensure that only qualified people install and operate the mixing console. During installation and operation, the user must have sufficient electrical contact to earth, otherwise electrostatic discharges might affect the operation of the unit.**

1.3.3 Online registration

Please do remember to register your new BEHRINGER equipment right after your purchase by visiting www.behringer.com (alternatively www.behringer.de) and kindly read the terms and conditions of our warranty carefully.

Should your BEHRINGER product malfunction, our goal is to have it repaired as quickly as possible. To arrange for warranty service, please contact the retailer from whom the equipment was purchased. Should your BEHRINGER dealer not be located in your vicinity, you may directly contact one of our subsidiaries. Corresponding contact information is included in the original equipment packaging (Global Contact Information/European Contact Information). Should your country not be listed, please contact the distributor nearest you. A list of distributors can be found in the support area of our website (www.behringer.com).

Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

2. CONTROL ELEMENTS AND CONNECTORS

This chapter describes the various control elements of your mixing console. All controls, switches and connectors will be discussed in detail.

2.1 Mono channels

2.1.1 Microphone and line inputs

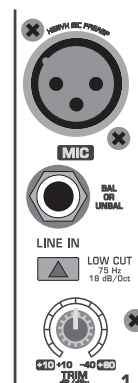



Fig. 2.1: Connectors and controls of mic/line inputs

MIC

Each mono input channel offers a balanced microphone input via the XLR connector and also features switchable +48 V phantom power supply for condenser microphones. The XENYX preamps provide undistorted and noise-free gain as is typically known only from costly outboard preamps.

 **Please mute your playback system before you activate the phantom power supply to prevent switch-on thumps being directed to your loudspeakers. Please also note the instructions in chapter 2.4.2 "Voltage supply, phantom power and fuse".**

LINE IN

Each mono input also features a balanced line input on a 1/4" connector. Unbalanced devices (mono jacks) can also be connected to these inputs.

XENYX 1204/1204FX

☞ Please remember that you can only use either the microphone or the line input of a channel at any one time. You can never use both simultaneously!

LOW CUT

The mono channels of the mixing consoles have a high-slope *LOW CUT* filter for eliminating unwanted, low-frequency signal components (75 Hz, 18 dB/octave).

TRIM

Use the *TRIM* control to adjust the input gain. This control should always be turned fully counterclockwise whenever you connect or disconnect a signal source to one of the inputs.

2.1.2 Equalizer

All mono input channels include a 3-band equalizer. All bands provide boost or cut of up to 15 dB. In the central position, the equalizer is inactive.

The circuitry of the British EQs is based on the technology used in the best-known top-of-the-line consoles and providing a warm sound without any unwanted side effects. The result are extremely musical equalizers which, unlike simple equalizers, cause no side effects such as phase shifting or bandwidth limitation, even with extreme gain settings of ± 15 dB.

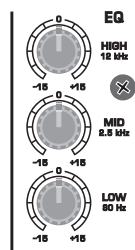


Fig. 2.2: The equalizer of the input channels

The upper (HI) and the lower band (LO) are shelving filters that increase or decrease all frequencies above or below their cut-off frequency. The cut-off frequencies of the upper and lower band are 12 kHz and 80 Hz respectively. The mid band is configured as a peak filter with a center frequency of 2.5 kHz.

2.1.3 Aux sends

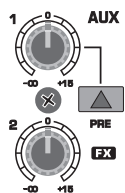


Fig. 2.3: The AUX SEND controls in the channel strips

Aux sends take signals via a control from one or more channels and sum these signals to a so-called bus. This bus signal is sent to an aux send connector and then routed, for example, to an active monitor speaker or an external effects device. The return from an external effect can then be brought back into the console via the aux return connectors.

For situations which require effects processing, the aux sends are usually switched post-fader so that the effects volume in a channel corresponds to the position of the channel fader. If this were not the case, the effects signal of the channel would remain audible even when the fader is turned to zero. When setting up a monitor mix, the aux sends are generally switched to pre-fader; i.e. they operate independently of the position of the channel fader.

Both aux sends are mono, are sourced after the equalizer and offer up to +15 dB gain.

☞ If you press the MUTE/ALT 3-4 switch, aux send 1 is muted, provided that it is switched post-fader. However, this does not affect the aux send 2 of the 1204FX.

AUX 1 (MON)

In the 1204FX, aux send 1 can be switched pre-fader and is thus particularly suitable for setting up monitor mixes. In the 1204, the first aux send is labeled *MON* and is permanently switched pre-fader.

PRE

When the *PRE* switch is pressed, aux send 1 is sourced pre-fader.

AUX 2 (FX)

The aux send labeled *FX* is for sending to effects devices and is thus set up to be post-fader.

In the 1204FX, the FX send is routed directly to the built-in effects processor.

☞ If you wish to use the internal effects processor, the STEREO AUX RETURN 2 connectors should not be in use.

☞ 1204FX: you can also connect an external effects processor to aux send 2, however the internal effects module will be muted.

2.1.4 Routing switch, solo and channel fader

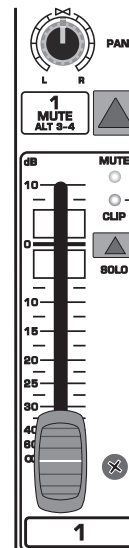


Fig. 2.4: Panorama and routing controls

PAN

The *PAN* control determines the position of the channel signal within the stereo image. This control features a constant-power characteristic, which means the signal is always maintained at a constant level, irrespective of position in the stereo panorama.

MUTE/ALT 3-4

You can use the *MUTE/ALT 3-4* switch to divert the channel from the main mix bus to the Alt 3-4 bus. This mutes the channel from the main mix.

MUTE-LED

The *MUTE* LED indicates that the relevant channel is diverted to the submix (Alt 3-4 bus).

CLIP-LED

The *CLIP* LED lights up when the input signal is driven too high. In this case, turn down the *TRIM* control and, if necessary, check the setting of the channel EQ.

SOLO

The **SOLO** switch (1204FX only) is used to route the channel signal to the solo bus (Solo In Place) or to the PFL bus (Pre Fader Listen). This enables you to monitor a channel signal without affecting the main output signal. The signal you hear is sourced either before (PFL, mono) or after (solo, stereo) both the pan control and the channel fader (see chapter 2.3.6 “Level meters and monitoring”).

The channel fader determines the level of the channel signal in the main mix (or submix).

2.2 Stereo channels

2.2.1 Channel inputs

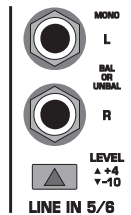


Fig. 2.5: Stereo channel inputs and LEVEL switch

Each stereo channel has two balanced line level inputs on 1/4" connectors for left and right channels. If only the connector marked “L” is used, the channel operates in mono. Stereo channels are designed to handle typical line level signals.

Both inputs can also be used with unbalanced jacks.

LEVEL

For level matching, the stereo inputs feature a **LEVEL** switch which selects between +4 dBu and -10 dBV (home-recording level), the input is more sensitive than at +4 dBu (studio level).

2.2.2 Equalizer stereo channels

The equalizer of the stereo channels is, of course, stereo. The filter characteristics and crossover frequencies are the same as those of the mono channels. A stereo equalizer is always preferable to two mono equalizers if frequency correction of a stereo signal is needed. There is often a discrepancy between the settings of the left and the right channels when using separate equalizers.

2.2.3 Aux sends stereo channels

In principle, the aux sends of the stereo channels function in just the same way as those of the mono channels. As aux send paths are always mono, the signal on a stereo channel is first summed to mono before it reaches the aux bus.

2.2.4 Routing switch, solo and channel fader

BAL

The function of the **BAL(ANCE)** control corresponds to the **PAN** control in the mono channels.

The balance control determines the relative proportion between the left and right input signals before both signals are routed to the main stereo mix bus.

The **MUTE/ALT 3-4** switch, the **MUTE-LED**, the **CLIP-LED**, the **SOLO** switch and the channel fader function in the same way as the mono channels.

2.3 Connector panel and main section

Whereas it was useful to trace the signal flow from top to bottom in order to gain an understanding of the channel strips, we now look at the mixing console from left to right. The signals are, so to speak, collected from the same point on each of the channel strips and then routed to the main section all together.

2.3.1 Aux sends 1 and 2

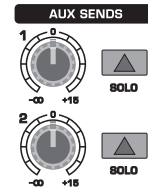


Fig. 2.6: AUX SEND controls of the main section

A channel signal is routed to aux send bus 1 if the **AUX 1** control is turned up on the corresponding channel.

AUX SEND 1 (MON)

The **AUX SEND** control **MON** acts as master control for aux send 1 and determines the level of the summed signal. In the 1204FX, the **MON** control is called **AUX SEND 1**.

AUX SEND 2 (FX)

Similarly, the **FX** control (**AUX SEND 2**) determines the level for aux send 2.

SOLO

You can use the **SOLO** switch (1204FX only) to separately monitor the aux sends via the **CONTROL ROOM/PHONES** outputs and check these with the level meters.

☞ If you want to monitor the signal of just one AUX bus, none of the other SOLO SWITCHES should be pressed and the MODE switch must be in the SOLO position (not pressed down).

2.3.2 Aux send connectors 1 and 2

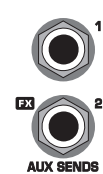


Fig. 2.7: Aux send connectors

AUX SEND 1

If you use aux send 1 pre-fader, you would usually connect the **AUX SEND 1** connector to monitors via a power amp (or an active monitor system). If you use aux send 1 post-fader, proceed as described under aux send 2.

AUX SEND 2

The **AUX SEND 2** connector outputs the signal you picked up from the individual channels using the **FX** control. You can connect this to the input of an effects device in order to process the **FX** bus signal. Once an effects mix is created, the processed signal can then be routed from the effects device output back into the **STEREO AUX RETURN** connectors.

2.3.3 Stereo aux return connectors

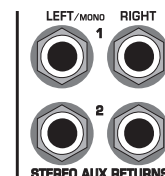



Fig. 2.8: Stereo aux return connectors

STEREO AUX RETURN 1


The **STEREO AUX RETURN 1** connectors generally serve as the return path for the effects mix generated using the post-fader aux send. This is where you connect the output signal of the external effects device. If only the left connector is used, the **AUX RETURN** automatically operates in mono.


XENYX 1204/1204FX

 You can also use these connectors as additional line inputs.

STEREO AUX RETURN 2

The *STEREO AUX RETURN 2* connectors serve as the return path for the effects mix generated using the FX control. If these connectors already function as additional inputs, you can route the effects signal back into the console via a different channel, with the added benefit that the channel EQ can be used to adjust the frequency response of the effects return signal.

 In this instance, the FX control of the channel being used as an effects return should be turned fully counterclockwise, otherwise feedback problems could occur!

 If you wish to use the internal effects processor, no connectors should be plugged into *STEREO AUX RETURN 2*.

2.3.4 Stereo aux return

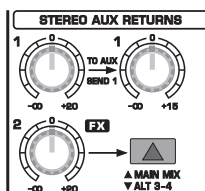



Fig. 2.9: Stereo aux return controls

STEREO AUX RETURN 1

STEREO AUX RETURN 1 is a stereo control which determines the level of the signal in the main mix. If *STEREO AUX RETURN 1* is used as effects return, you can add the effects signal to any “dry” channel signal.

 In this instance, the effects device should be set at 100% effect.

STEREO AUX RETURN MON

The *STEREO AUX RETURN MON* control has a special function: it can be used to add an effect to a monitor mix. For example:

Monitor mix with effect

In this instance, the effects device should be set up as follows: *AUX SEND 2* is connected to the L/Mono input of your effects device, while its outputs are connected to *STEREO AUX RETURN 1*. Connect the amplifier of your monitor system to *AUX SEND 1*. The *AUX SEND 1* master control determines the volume of the monitor mix.

You can now use the *STEREO AUX RETURN MON* control to adjust the level of the effects signal routed to the monitor mix.

You can easily use the headphones distribution amplifier BEHRINGER POWERPLAY PRO HA4600/HA4700/HA8000 to provide you with four (or eight with the HA8000) stereo headphone mixes for your studio.

STEREO AUX RETURN 2 (FX)

The *STEREO AUX RETURN 2* control determines the level of signals fed into the *AUX RETURN 2* connectors which are routed to the main mix.

MAIN MIX/ALT 3-4

The *MAIN MIX/ALT 3-4* switch routes the signal connected to *STEREO AUX RETURN 2* to either main mix (not pressed) or submix (Alt 3-4, pressed).

2.3.5 Tape input / tape output

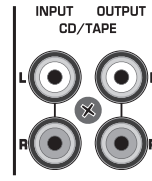



Fig. 2.10: 2-track connectors

CD/TAPE INPUT

The *CD/TAPE INPUT* RCA connectors are provided for connecting a 2 track machine (e.g. DAT recorder). They can also be used as stereo line input. Alternatively, the output signal of a second XENYX or BEHRINGER ULTRALINK PRO MX882 can also be connected. If you connect a hi-fi amplifier with a source selection switch to the *CD/TAPE INPUT*, you can easily switch between additional sources (e.g. cassette recorder, CD player, etc.).

CD/TAPE OUTPUT

These connectors are wired in parallel with the *MAIN OUT* and carry the main mix signal (unbalanced). Connect the *CD/TAPE OUTPUT* to the inputs of your recording device. The final output level can be adjusted via the high-precision *MAIN MIX* fader.

 If you connect a compressor or a noise gate after the 2-track output, the faders will probably not be able to create a satisfactory fade-out effect.

2.3.6 Level meter and monitoring

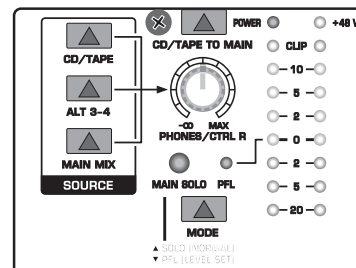


Fig. 2.11: Control room/phones section, level meter

CD/TAPE

The *TAPE* switch routes the signal from the *TAPE IN* connectors to the level meter, the *CONTROL ROOM OUT* outputs and the *PHONES* connector—this is a simple way to check recorded signals via monitor speakers or headphones.

ALT 3-4

Similarly, the *ALT 3-4* switch routes the signal from the *Alt 3-4* bus to the same path for monitoring purposes.

MAIN MIX

The *MAIN MIX* switch sends the main mix signal to the above-mentioned outputs and to the level meter.

PHONES/CTRL R(oom)

Use this control to set control room output level and headphones volume respectively.

CD/TAPE TO MAIN

When the *CD/TAPE TO MAIN* switch is depressed, the 2-track input is routed to the main mix and thus serves as an additional input for tape machines. You can also connect MIDI instruments or other signal sources here that do not require any further processing. At the same time, this switch disables the main mix to tape output link.

POWER

The blue *POWER* LED indicates that the device is switched on.

+48 V

The red “+48 V” LED lights up when the phantom power supply is switched on. The phantom power supply is necessary for condenser microphones and is activated using the switch on the rear of the device.

⚠ Please do not connect microphones to the mixer (or the stagebox/wallbox) while the phantom power supply is switched on. Connect microphones before you switch on the power supply. In addition, the monitor/PA loudspeakers should be muted before you activate the phantom power supply. After switching on, wait approx. one minute to allow for system stabilization.

LEVEL METER

The high-precision level meter accurately displays the appropriate signal level.

LEVEL SETTING:

When recording to a digital device, the recorder’s peak meter should not exceed 0 dB. This is because, unlike analog recordings, slightly excessive levels can create unpleasant digital distortion.

When recording to an analog device, the VU meters of the recording machine should reach approx. +3 dB with low-frequency signals (e.g. kick drum). Due to their inertia VU meters tend to display too low a signal level at frequencies above 1 kHz. This is why, for example, a Hi-Hat should only be driven as far as -10 dB. Snare drums should be driven to approx. 0 dB.

⚠ The peak meters of your XENYX display the level virtually independent of frequency. A recording level of 0 dB is recommended for all signal types.

MODE (1204FX only)

The *MODE* switch determines whether the channels’ SOLO switch operates as PFL (Pre Fader Listen) or as solo (Solo In Place).

PFL

To activate the PFL function, depress the *MODE* switch. The PFL function should, as a rule, be used for gain setting purposes. The signal is sourced pre-fader and assigned to the mono PFL bus. In the “PFL” setting, only the left side of the peak meter operates. Drive the individual channels to the 0 dB mark of the VU meter.

Solo

When the *MODE* switch is not depressed, the stereo solo bus is active. Solo is short for “Solo In Place”. This is the customary method for listening to an individual signal or to a group of signals. As soon as a solo switch is pressed, all channels in the control room (and headphones) that have not been selected are muted thereby retaining stereo panning. The solo bus can carry the output signals of the channel pan controls, the aux sends and the stereo line inputs. The solo bus is, as a rule, switched post-fader.

⚠ The PAN control in the channel strip offers a constant power characteristic. This means that the signal is always at a constant level, irrespective of its position in the stereo panorama. If the PAN control is moved fully left or right from center, the level increases by 4 dB in that channel. This ensures that, when set in the center, the audio signal is not louder. For this reason, with the solo function activated (Solo in Place), audio signals from the channels with PAN controls that have not been moved fully to the left or right are displayed at a lower volume than in the PFL function.

As a rule, solo signals are monitored via the control room outputs and headphones connector and are displayed by the level meters. If a solo switch is pressed, the signals from the tape input, Alt 3-4 and main mix are blocked from the control room outputs, the headphone connector and the level meter.

MAIN SOLO (1204FX only)

The *MAIN SOLO* LED lights up as soon as a channel or aux send solo switch is switched. The *MODE* switch also has to be set at “Solo”.

PFL (1204FX only)

The *PFL* LED indicates that the peak meter is set to PFL mode.



Fig. 2.12: PHONES connector

PHONES

You can connect headphones to this 1/4" TRS connector. The signal on the *PHONES* connection is sourced from the control room output.

2.3.7 Alt 3-4 and main mix fader

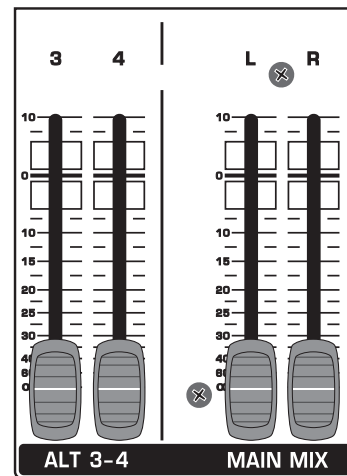


Fig. 2.13: Alt 3-4 and main mix fader

Use the high-precision quality faders to control the output level of the Alt 3-4 subgroup and main mix.

2.4 Rear view of 1204FX/1204

2.4.1 Main mix outputs, Alt 3-4 outputs and control room outputs

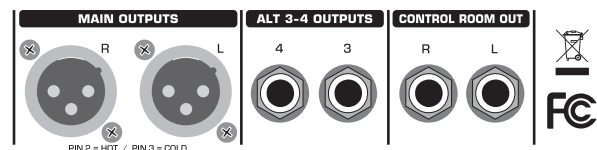


Fig. 2.14: Main mix outputs, Alt 3-4 outputs and control room outputs

MAIN OUTPUTS

The *MAIN* outputs carry the *MAIN MIX* signal and are on balanced XLR connectors with a nominal level of +4 dBu.

ALT 3-4 OUTPUTS

The *ALT 3-4* outputs are unbalanced and carry the signals of the channels that you have assigned to this group using the *MUTE* switch. This can be used to route a subgroup to a further mixing console for example, or it could be used as a recording output working in tandem with the main output. This means you could record to four tracks simultaneously. The icing on the cake, so to speak, is that you could connect Y-cables to these four outputs and then connect your 8-track recorder in such a way that you have 2 x 4 tracks (e.g. channel 1 feeds track 1 and track 2, etc.). In the first recording pass, you record on tracks 1,

XENYX 1204/1204FX

3, 5 and 7 and in the second pass, on tracks 2, 4, 6 and 8.

CONTROL ROOM OUTPUTS

The control room output is normally connected to the monitor system in the control room and provides the stereo mix or, when required, the solo signal.

2.4.2 Voltage supply, phantom power and fuse

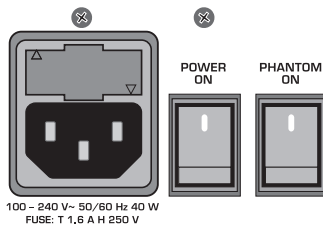


Fig. 2.15: Voltage supply and fuse

FUSE HOLDER

The console is connected to the mains via the cable supplied which meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating.

IEC MAINS RECEPTACLE

The mains connection is via a cable with IEC mains connector. An appropriate mains cable is supplied with the equipment.

POWER

Use the *POWER* switch to power up the mixing console.

PHANTOM

The *PHANTOM* switch activates the phantom power supply for the XLR connectors of the mono channels which is required to operate condenser microphones. The red +48 V LED lights up when phantom power is on. As a rule, dynamic microphones can still be used with phantom power switched on, provided that they are wired in a balanced configuration. In case of doubt, contact the microphone manufacturer!

⚠ After the phantom power supply has been switched on, do not connect microphones to the mixer (or the stagebox/wallbox). Connect the microphones before you switch phantom power on. In addition, the monitor/PA loudspeakers should be muted before activating the phantom power supply. After switching on, wait approx. one minute to allow the system to stabilize.

⚠ Caution! You must never use unbalanced XLR connectors (PIN 1 and 3 connected) on the MIC input connectors if you want to use the phantom power supply.

SERIAL NUMBER

Please note the important information on the serial number given in chapter 1.3.3.

3. DIGITAL EFFECTS PROCESSOR

24-BIT MULTI-FX PROCESSOR		
00 SMALL HALL	36 REVERSE	80 CHORUS & REVERB
03 MID HALL	40 EARLY REFL	82 FLANGER & REVERB
06 BIG HALL	44 AMBIENCE	84 PHASER & REVERB
09 CHURCH	48 STADIUM	86 PITCH & REVERB
10 SMALL ROOM	49 AMBIENCE FX	88 DELAY & REVERB
13 MID ROOM	50 DELAY	90 DELAY & GATED
16 BIG ROOM	53 ECHO	91 DELAY & REVERSE
19 CHAPEL	60 CHORUS	92 DELAY & CHORUS
20 PLATE	66 FLANGER	94 DELAY & FLANGER
27 SPRING	70 PHASER	96 DELAY & PHASER
30 GATED REV	74 PITCH SHIFT	99 DELAY & PITCH

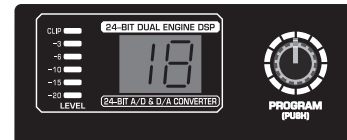


Fig. 3.1: Digital effects module (only 1204FX)

24-BIT MULTI-EFFECTS PROCESSOR

Here you can find a list of all presets stored in the multi-effects processor. This built-in effects module produces high-grade standard effects such as reverb, chorus, flanger, delay and various combination effects. The integrated effects module has the advantage of requiring no wiring. This way, the danger of creating ground loops or uneven signal levels is eliminated at the outset, completely simplifying the handling.

These effect presets are designed to be added to dry signals. If you move the FX TO MAIN control, you mix the channel signal (dry) and the effect signal.

This also goes for mixing effects signals with the monitor mix. The main difference is that the mix ratio is adjusted using the FX TO MON control. Of course, a signal has to be fed into the effects processor via the FX control in the channel strip for both applications.

⚠ On the following page, you will find an illustration showing how to connect your foot switch correctly.

LEVEL

The LED level meter on the effects module should display a sufficiently high level. Take care to ensure that the clip LED only lights up at peak levels. If it is lit constantly, you are overloading the effects processor and this could cause unpleasant distortion. The FX control (AUX SEND 2) determines the level that reaches the effects module.

PROGRAM


You can select the effect preset by turning the *PROGRAM* control. The display flashes the number of the current preset. To recall the selected preset, press the button; the flashing stops. You can also recall the selected preset with the foot switch.

4. INSTALLATION

4.1 Rack mounting

The packaging of your mixing console contains two 19" rack mount wings which can be installed on the side panels of the console.

Before you can attach the rack mount wings to the mixing console, you need to remove the screws holding the left and right side panels. Use these screws to fasten the two wings onto the console, being careful to note that each wing fits a specific side. With the rack mount wings installed, you can mount the mixing console in a commercially available 19" rack. Be sure to allow for proper air flow around the unit, and do not place the mixing console close to radiators or power amps, so as to avoid overheating.

 **Only use the screws holding the mixing console side panels to fasten the 19" rack mounts.**

4.2 Cable connections

You will need a large number of cables for the various connections to and from the console. The illustrations below show the wiring of these cables. Be sure to use only high-grade cables.

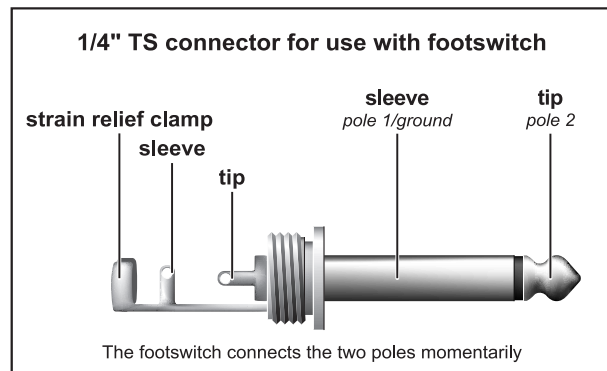



Fig. 4.1: 1/4" TS connector for foot switch


4.2.1 Audio connections

Please use commercial RCA cables to wire the 2-track inputs and outputs.

You can, of course, also connect unbalanced devices to the balanced input/outputs. Use either mono plugs, or ensure that ring and sleeve are bridged inside the stereo plug (or pins 1 & 3 in the case of XLR connectors).

 **Caution! You must never use unbalanced XLR connectors (pin 1 and 3 connected) on the MIC inputs if you intend to use the phantom power supply.**

Balanced use with XLR connectors

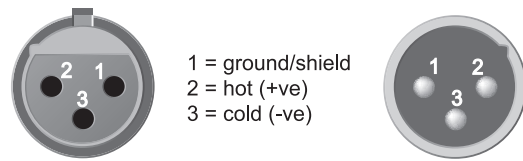

For unbalanced use pin 1 and pin 3 have to be bridged.

Fig. 4.2: XLR connections

Unbalanced use of 1/4" TS connector


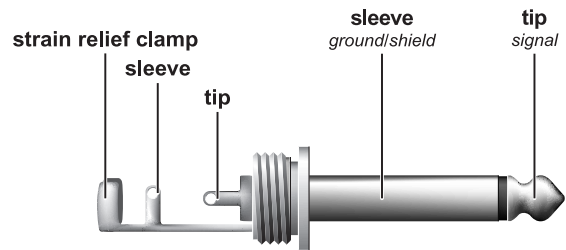


Fig. 4.3: 1/4" TS connector

Balanced use of 1/4" TRS connector

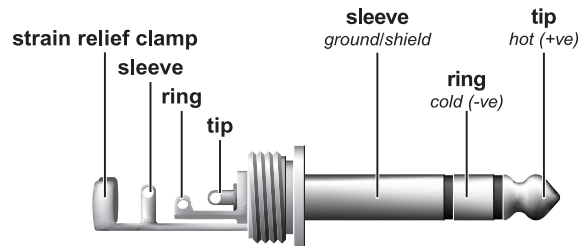

For connection of balanced and unbalanced plugs, ring and sleeve have to be bridged at the stereo plug.

Fig. 4.4: 1/4" TRS connector

Headphones connection with 1/4" TRS connector

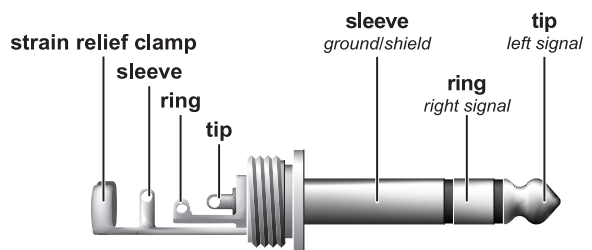


Fig. 4.5: 1/4" TRS connector for headphones

XENYX 1204/1204FX

5. SPECIFICATIONS

Mono inputs

Microphone inputs (XENYX Mic Preamp)

Type	XLR, electronically balanced, discrete input circuit
Mic E.I.N. (20 Hz - 20 kHz)	
@ 0 Ω source resistance	-134 dB / 135.7 dB A-weighted
@ 50 Ω source resistance	-131 dB / 133.3 dB A-weighted
@ 150 Ω source resistance	-129 dB / 130.5 dB A-weighted

Frequency response	<10 Hz - 150 kHz (-1 dB), <10 Hz - 200 kHz (-3 dB)
--------------------	---

Gain range	+10 to +60 dB
Max. input level	+12 dBu @ +10 dB gain
Impedance	approx. 2.6 k Ω balanced
Signal-to-noise ratio	110 dB / 112 dB A-weighted (0 dBu In @ +22 dB gain)

Distortion (THD+N)	0.005% / 0.004% A-weighted
--------------------	----------------------------

Line input

Type	1/4" TRS connector electronically balanced
Impedance	approx. 20 k Ω balanced 10 k Ω unbalanced
Gain range	-10 to +40 dB
Max. input level	30 dBu

Fade-out attenuation¹ (Crosstalk attenuation)

Main fader closed	90 dB
Channel muted	89.5 dB
Channel fader closed	89 dB

Frequency response

Microphone input to main out	
<10 Hz - 90 kHz	+0 dB / -1 dB
<10 Hz - 160 kHz	+0 dB / -3 dB

Stereo inputs

Type	1/4" TRS connector, electronically balanced
Impedance	approx. 20 k Ω
Max. input level	+22 dBu

EQ mono channels

Low	80 Hz / \pm 15 dB
Mid	2.5 kHz / \pm 15 dB
High	12 kHz / \pm 15 dB

EQ stereo channels

Low	80 Hz / \pm 15 dB
Mid	2.5 kHz / \pm 15 dB
High	12 kHz / \pm 15 dB

Aux sends

Type	1/4" TS connector, unbalanced
Impedance	approx. 120 Ω
Max. output level	+22 dBu

Stereo aux returns

Type	1/4" TRS connector, electronically balanced
Impedance	approx. 20 k Ω bal. / 10 k Ω unbal.
Max. input level	+22 dBu

Main outputs

Type	XLR, electronically balanced
Impedance	approx. 240 Ω bal. / 120 Ω unbal.
Max. output level	+28 dBu

Control room outputs

Type	1/4" TS connector, unbal.
Impedance	approx. 120 Ω
Max. output level	+22 dBu

Headphones output

Type	1/4" TRS connector, unbalanced
Max. output level	+19 dBu / 150 Ω (+25 dBm)

DSP

Converter	24-bit Texas Instruments™ 24-bit Sigma-Delta, 64/128-times oversampling
Sampling rate	40 kHz

Main mix system data²

Noise	
Main mix @ - ∞ ,	
Channel fader - ∞	-105 dB / -108 dB A-weighted
Main mix @ 0 dB,	
Channel fader - ∞	-95 dB / -97 dB A-weighted
Main Mix @ 0 dB,	
Channel fader @ 0 dB	-82,5 dB / -85 dB A-weighted

Power supply

Mains voltage	100 - 240 V~, 50/60 Hz
Power consumption	40 W
Fuse	100 - 240 V~: T 1.6 A H 250 V
Mains connection	Standard IEC receptacle

Physical

1204FX

Dimensions (H x W x D)	approx. 97 mm (3 7/8") x 247 mm (9 11/16") x 334 mm (13 5/32")
Weight (net)	approx. 2.60 kg (5 3/4 lbs)

1204

Dimensions (H x W x D)	approx. 97 mm (3 7/8") x 247 mm (9 11/16") x 328 mm (13")
Weight (net)	approx. 2.56 kg (5 5/8 lbs)

Measuring conditions:

- 1 kHz rel. to 0 dBu; 20 Hz - 20 kHz; line input; main output; unity gain.
- 20 Hz - 20kHz; measured at main output. Channels 1 - 4 unity gain; EQ flat; all channels on main mix; channels 1/3 as far left as possible, channels 2/4 as far right as possible. Reference = +6 dBu.

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.

6. WARRANTY

§ 1 OTHER WARRANTY RIGHTS AND NATIONAL LAW

1. This warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract.
2. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.

§ 2 ONLINE REGISTRATION

Please do remember to register your new BEHRINGER equipment right after your purchase by visiting www.behringer.com (alternatively www.behringer.de) and kindly read the terms and conditions of our warranty carefully.

Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

§ 3 WARRANTY

1. BEHRINGER (BEHRINGER International GmbH including all BEHRINGER subsidiaries listed on the enclosed page, except BEHRINGER Japan) warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of one (1) year* from the original date of purchase, in accordance with the warranty regulations described below. If the product shows any defects within the specified warranty period that are not excluded from this warranty as described under § 5, BEHRINGER shall, at its discretion, either replace or repair the product using suitable new or reconditioned parts. In the case that other parts are used which constitute an improvement, BEHRINGER may, at its discretion, charge the customer for the additional cost of these parts.
2. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid.
3. Warranty claims other than those indicated above are expressly excluded.

§ 4 RETURN AUTHORIZATION NUMBER

1. To obtain warranty service, the buyer (or his authorized dealer) must call BEHRINGER (see enclosed list) during normal business hours **BEFORE** returning the product. All inquiries must be accompanied by a description of the problem. BEHRINGER will then issue a return authorization number.
2. Subsequently, the product must be returned in its original shipping carton, together with the return authorization number to the address indicated by BEHRINGER.
3. Shipments without freight prepaid will not be accepted.

§ 5 WARRANTY REGULATIONS

1. Warranty services will be furnished only if the product is accompanied by a copy of the original retail dealer's invoice. Any product deemed eligible for repair or replacement under the terms of this warranty will be repaired or replaced.

2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation.

3. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, crossfaders, potentiometers, keys/buttons, tubes, guitar strings, illuminants and similar parts.

4. Damages/defects caused by the following conditions are not covered by this warranty:

- ▲ improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals.
- ▲ connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.
- ▲ damages/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER.

5. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.

6. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer.

7. Products which do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. BEHRINGER will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

§ 6 WARRANTY TRANSFERABILITY

This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BEHRINGER.

§ 7 CLAIM FOR DAMAGES

Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product.

* Customers in the European Union please contact BEHRINGER Germany Support for further details.

Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing. The names of companies, institutions or publications pictured or mentioned and their respective logos are registered trademarks of their respective owners. Their use neither constitutes a claim of the trademarks by BEHRINGER® nor affiliation of the trademark owners with BEHRINGER®. BEHRINGER® accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colours and specification may vary slightly from product. Products are sold through our authorised dealers only. Distributors and dealers are not agents of BEHRINGER® and have absolutely no authority to bind BEHRINGER® by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER Spezielle Studiotechnik GmbH. BEHRINGER® is a registered trademark.

ALL RIGHTS RESERVED. © 2006 BEHRINGER Spezielle Studiotechnik GmbH,
Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Münchheide II, Germany.
Tel. +49 2154 9206 0, Fax +49 2154 9206 4903